



# Motorola V60s Button Key Board Replacement

Written By: Eric Freeman



## INTRODUCTION

This guide describes how to replace the button key board, or the processor that interprets key pad information.



### TOOLS:

- [Spudger](#) (1)
- [T6 Torx Screwdriver](#) (1)



### PARTS:

- [Motorola V60 Button Board](#) (1)
-

## Step 1 — Battery



- Remove battery cover by pushing down release lever at top of phone while prying off cover.
- Set cover aside.

## Step 2




- Remove battery by grabbing it near the bottom and lifting out.

## Step 3 — Logic Board



- Unscrew four corner screws with T6 screwdriver.
- Note: The two top screws are short and silver. The two bottom screws are black and long.


## Step 4

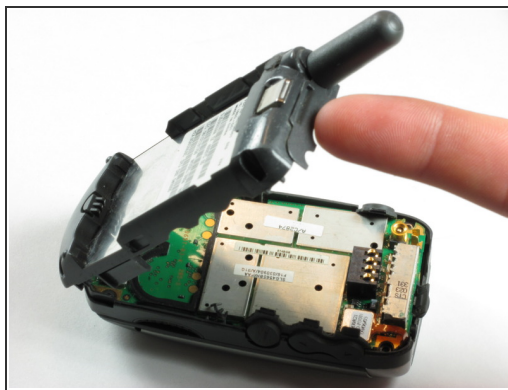

- Use a spudger to gently pry off back chassis. Wedge the spudger in crevice between back panel and phone and lift.




## Step 5

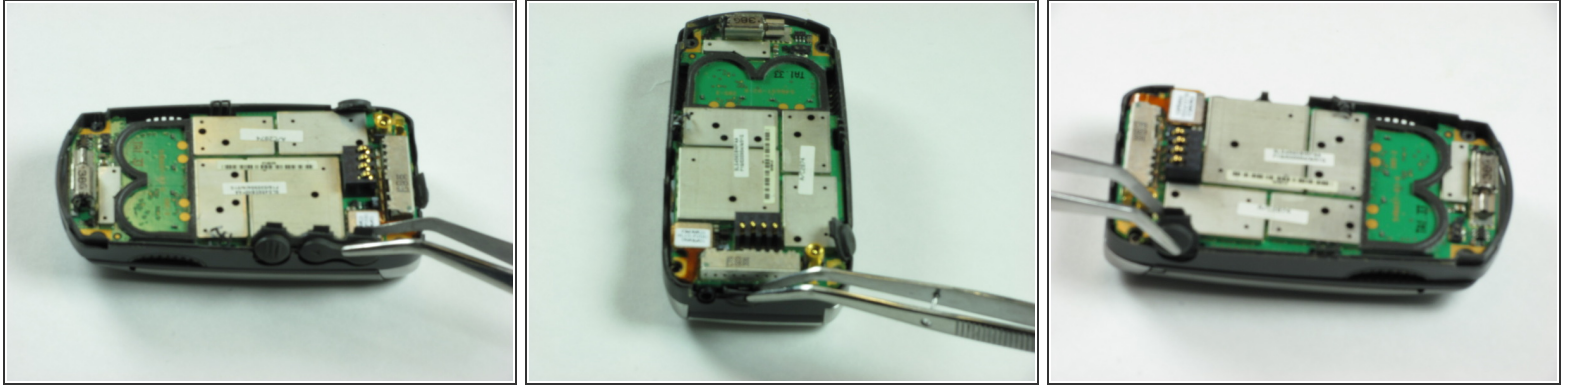



- Starting from left side of phone, remove side buttons and place aside.
- Note: There should be three buttons. One on each side, and the top.
- Return phone to starting orientation when done.

## Step 6

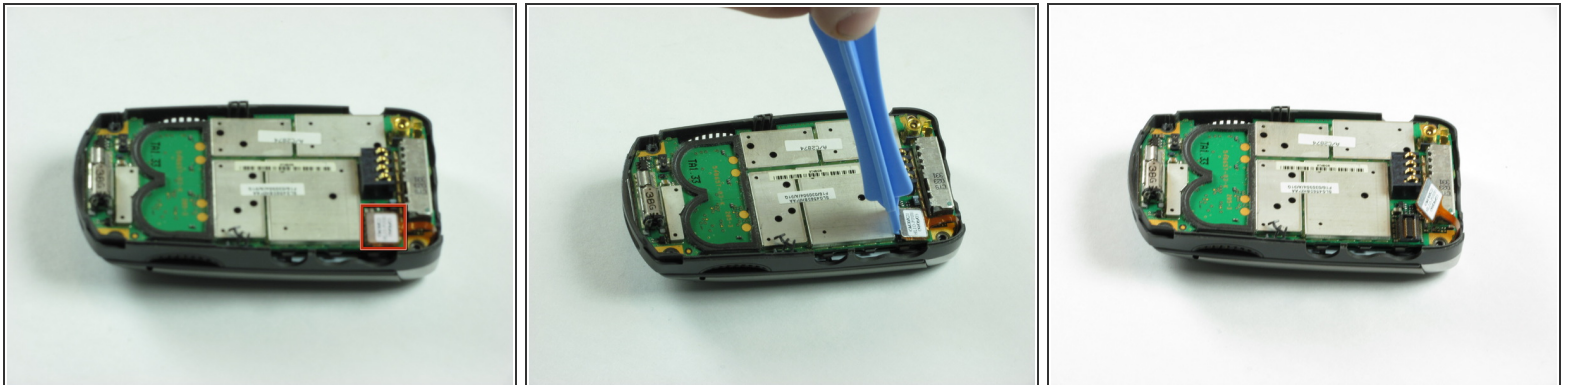



- Gently remove orange ribbon cable by prying up with spudger.

## Step 7

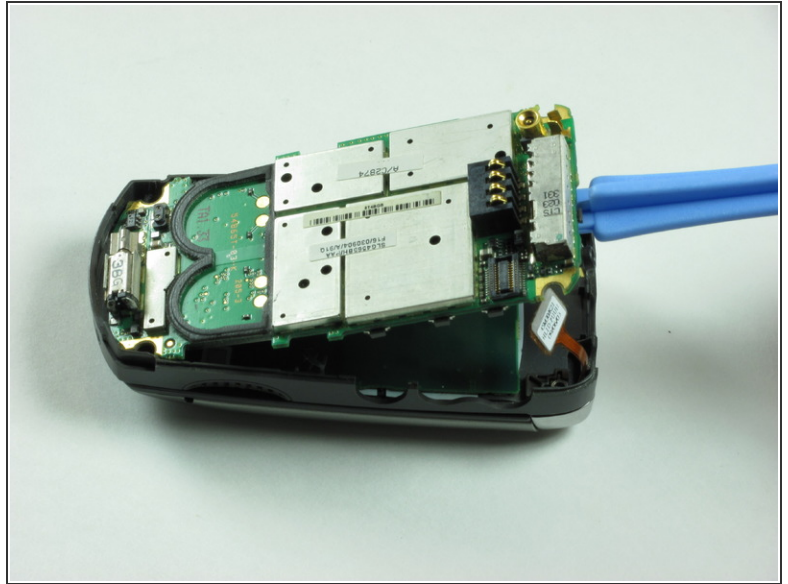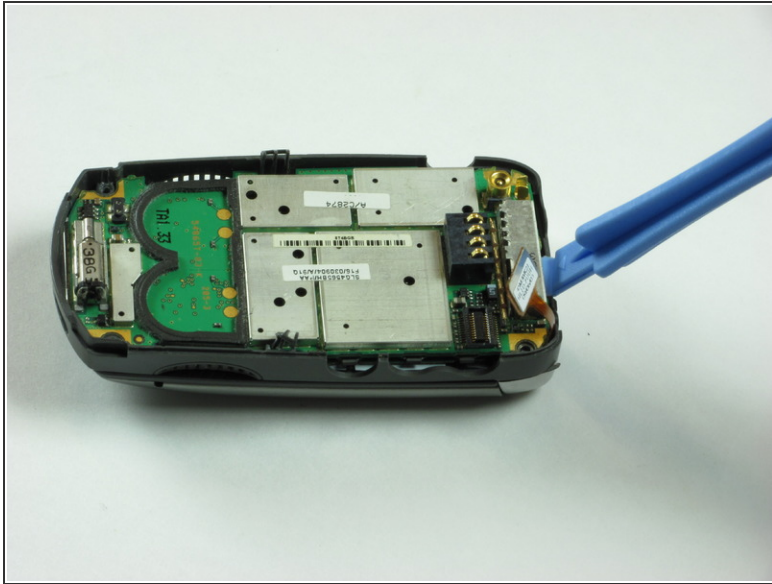

- Use a spudger to pry up logic board by wedging in between logic board and chassis and lifting.
- Note: Orange ribbon cable is fragile and can be broken.

## Step 8 — Button Key Board

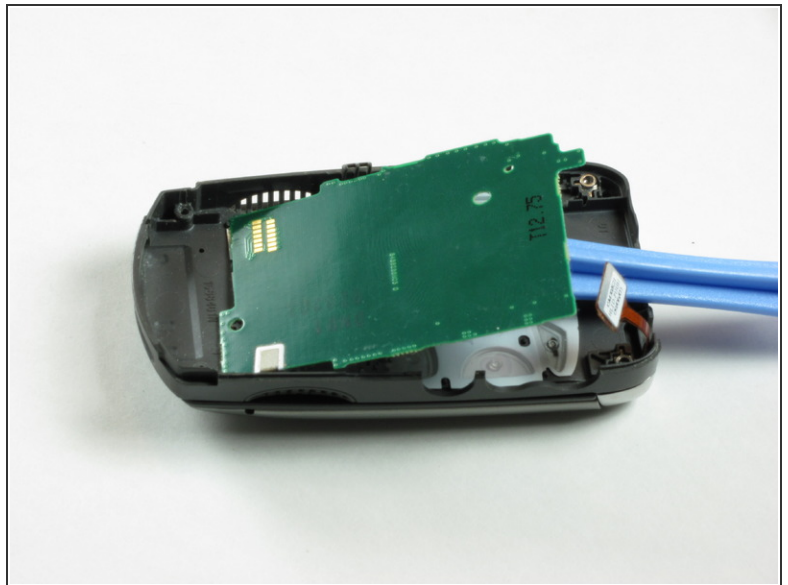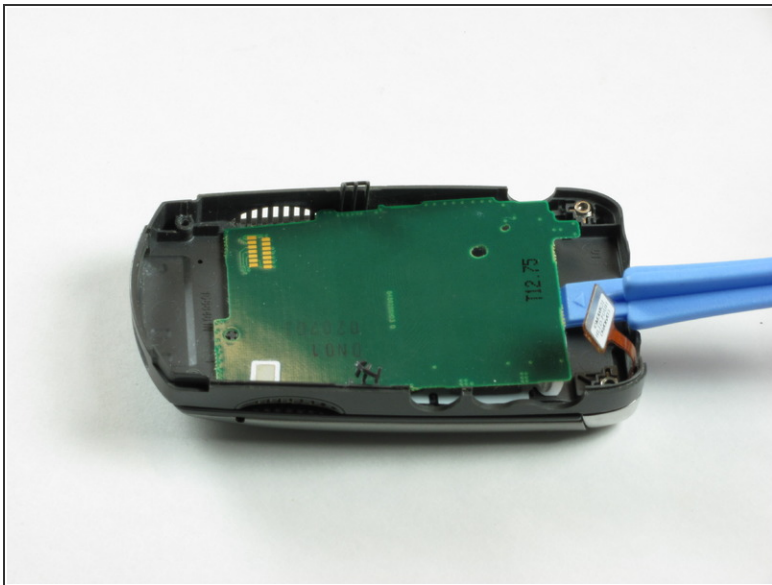

- Insert spudger under button board and gently lift, set aside.

To reassemble your device, follow these instructions in reverse order.

